 


SIZE 321/301(S) **WEIGHT** 1340 g / 1320 g **MINIMAL WEIGHT** 1280 g / 1260 g **BACK LENGTH** Regular / Short (S)


SAFETY COMPARTMENT



Access to the compartment is marked with the red zipper pullers. Probe and shaft receiver are marked with icons. Fasten the shovel, with the sharp edge up, on the front of the backpack.

TOUR SERIES HAUTE ROUTE 32/30 S




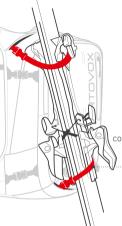


D-SKIFIX

Push the ski through the large loop hidden in the small compartment under the icon panel. Secure with loop, hidden in small compartment above the left shoulder strap.

HELMET FIXATION

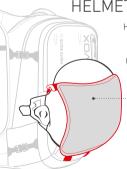


Helmet net is stored in the foremost compartment (ORTOVOX icon). For fixation use small loops on the sides.

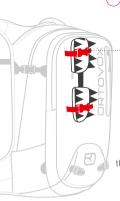

CRAMPONS FIXATION

Fix the crampons by fitting the two additional straps (located in the middle compartment) through the small slots at the front.

ICE AXE FIXATION

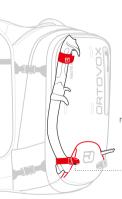



There is space for two ice axes. Place the pick of the axe into the icon compartment and fix it with the buckles. Then attach the shaft by fitting the addtional velcro strap (found in the middle compartment) trought the slots on the front panel.





 SNOWBOARD AND SNOWSHOE FASTENER

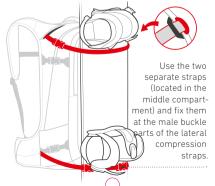




COMPRESSION STRAPS

Can be used for gear attachment, ski fixation or as compression straps.

O-FLEX FRAME AND BACK OPENING



Perfect access to your gear in snowy conditions.

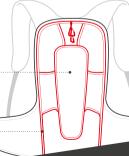

TOUR SERIES HAUTE ROUTE 32 / 30 S

